



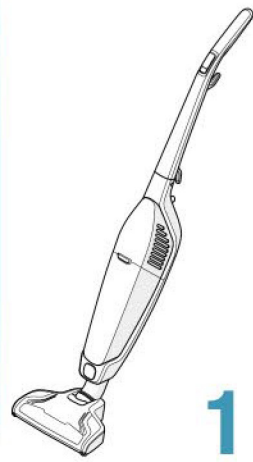

Electrolux


Dynamica
Dynamica Pro
Dynamica Pro Plus

1. ✓
2. ✓
3. ✓
4. ✓
5. ✓

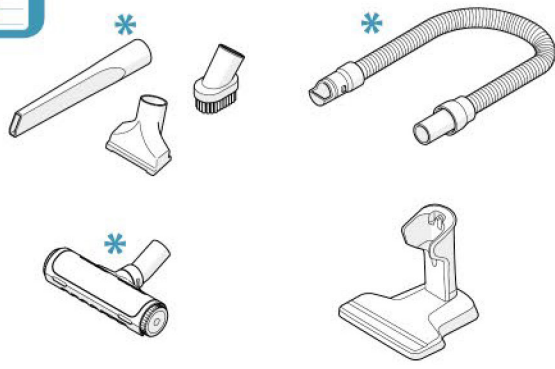


1


* Applies to certain models only | 僅適用於特定型號 | 仅适用于特定型号 | Berkenaan dengan model tertentu saja | Chỉ áp dụng cho một số kiểu máy | ใช้กับเครื่องใช้ไฟฟ้าบางรุ่นเท่านั้น | 특정 모델에만 적용

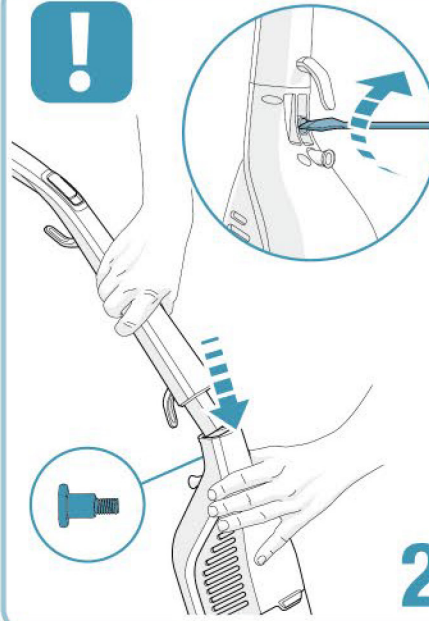


2

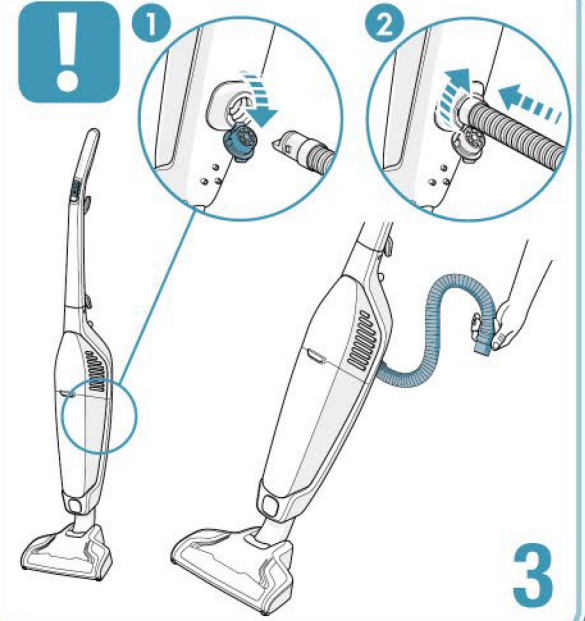

3

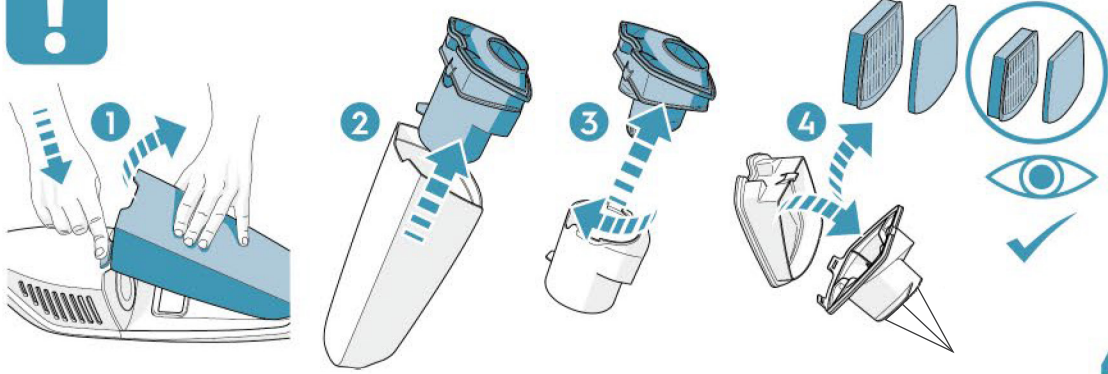

4

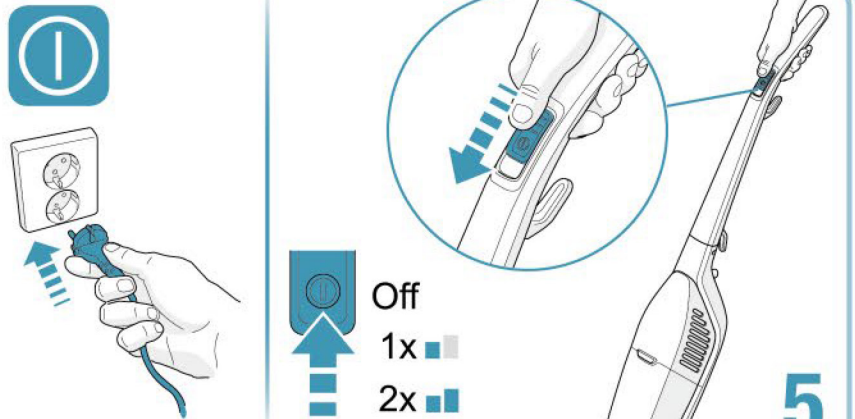


5





6


R Recommended nozzle | 推薦噴頭 | 推荐喷嘴 | Nosel yang disarankan | đầu hút được khuyến nghị | หัวดูดที่แนะนำ | 권장 노즐

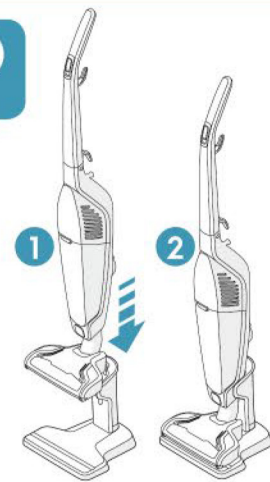


7

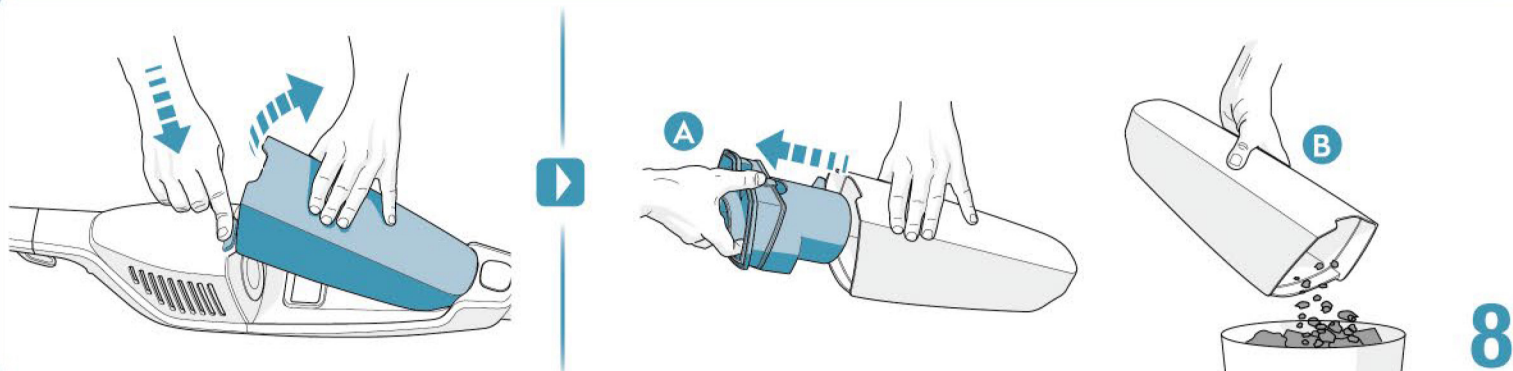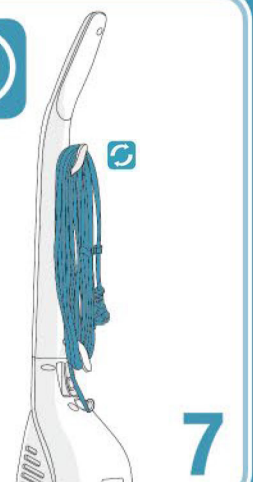

8

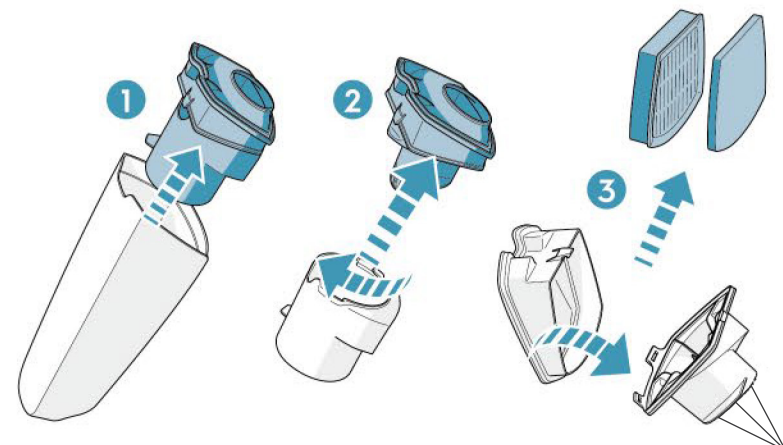


! www.electrolux.com/shop

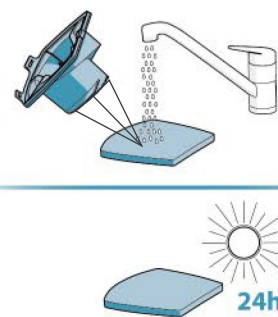

ref: EF 153

9

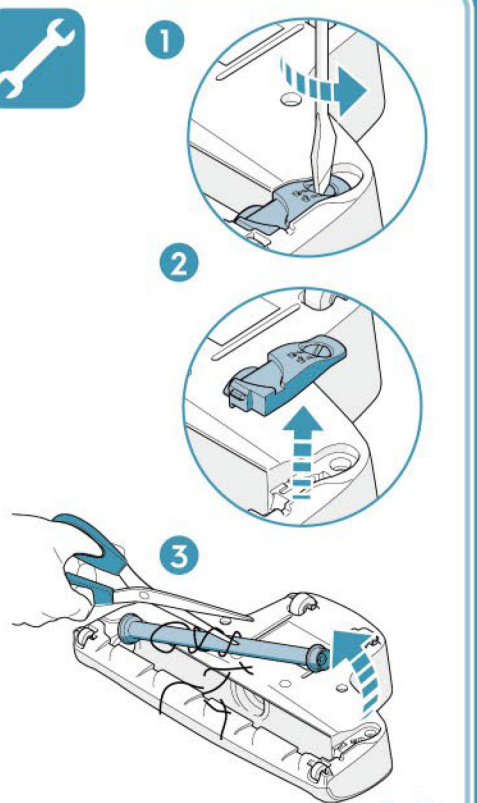

10