



Electrolux

Instruction Book

사용 설명서

Sách Hướng Dẫn

Buku Petunjuk

คู่มือการใช้งาน

 
کتاب التعليمات

 
 
 
 
 
 
 
800 CORDLESS CLEANER

 
 
 
 
 
 
EFP81812W/EFP81813B/EFP81814

 
 
 
EFP81824/EFP81825A/EFP81812S/

 
 
 
 
 
 
 
 
 
 
EFP81824S/EFP81825SB/EFP81835S

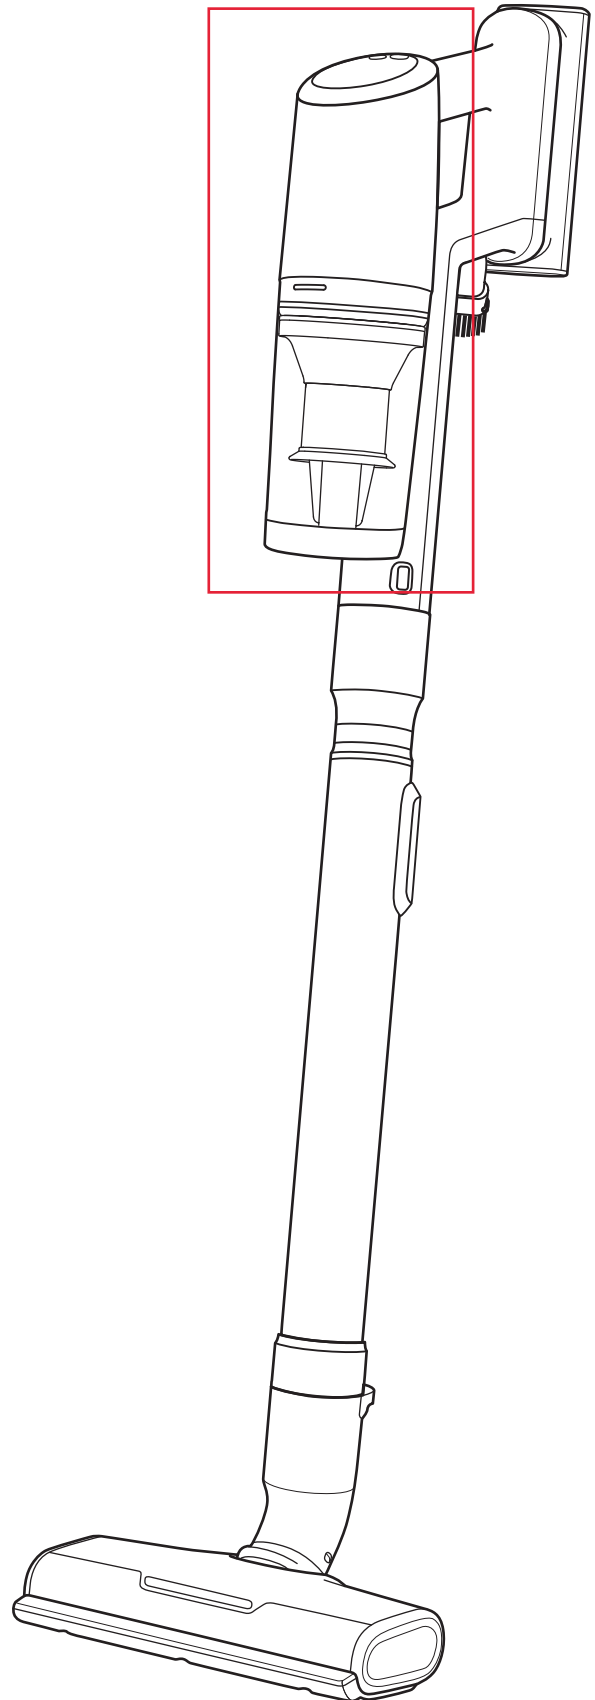





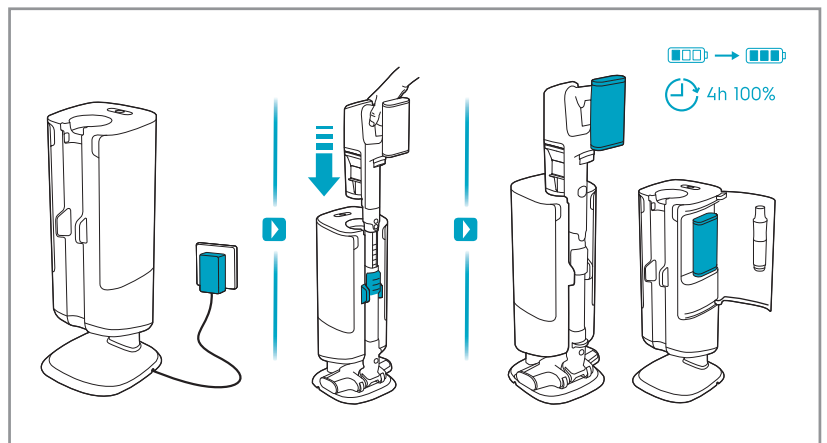
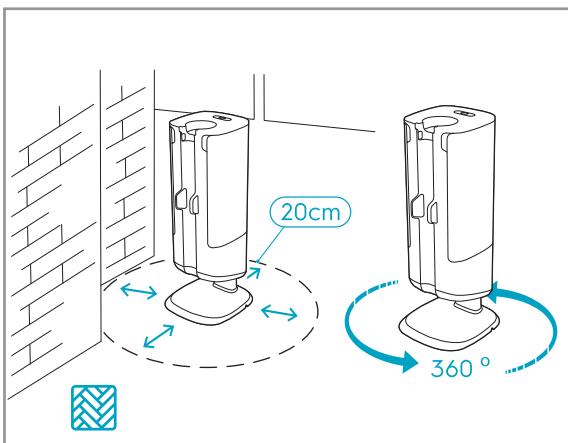
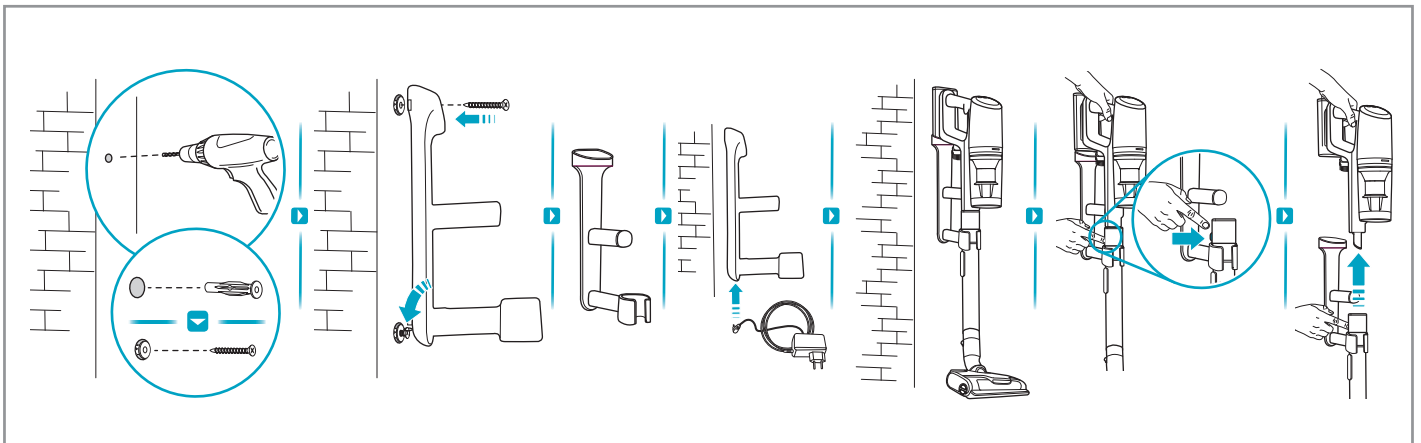
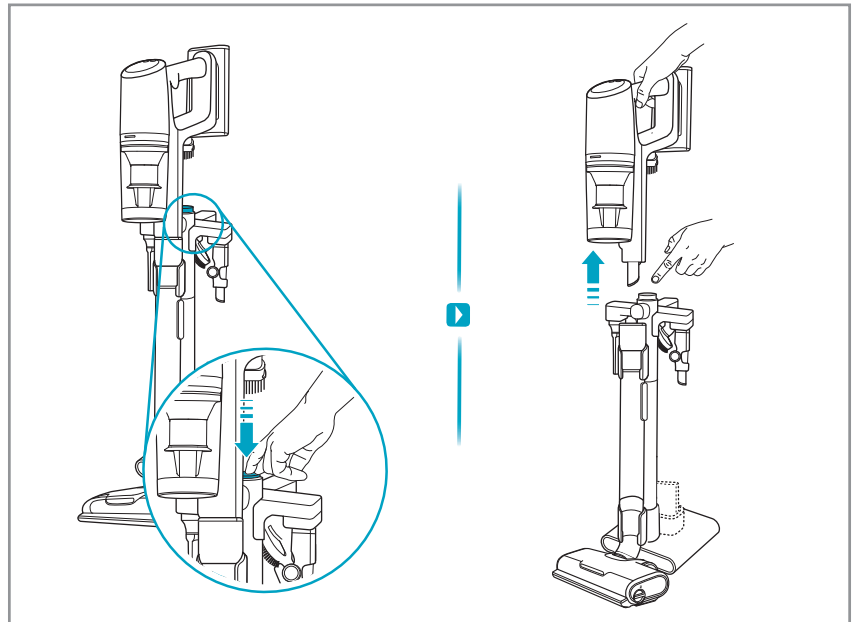
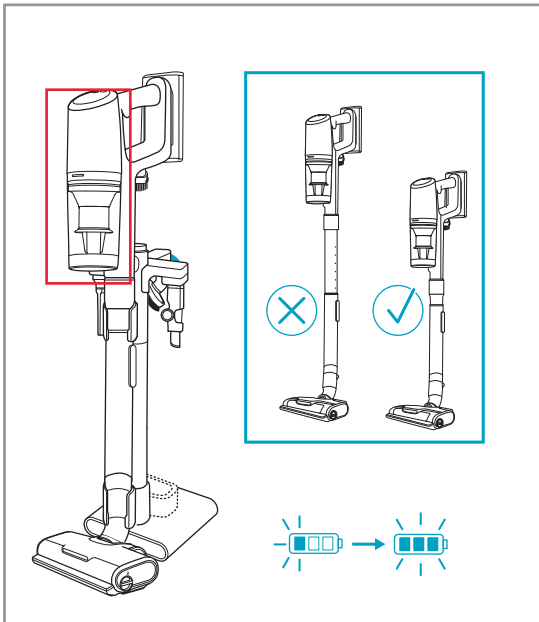
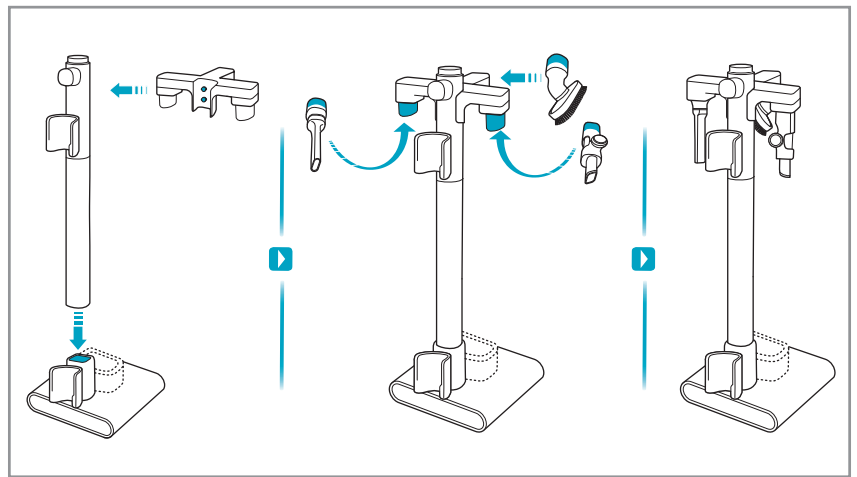
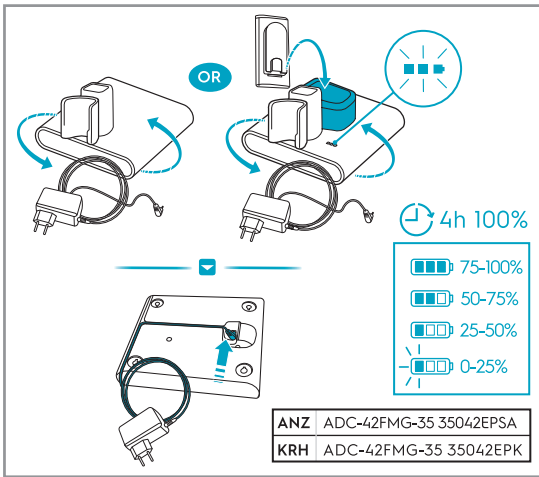


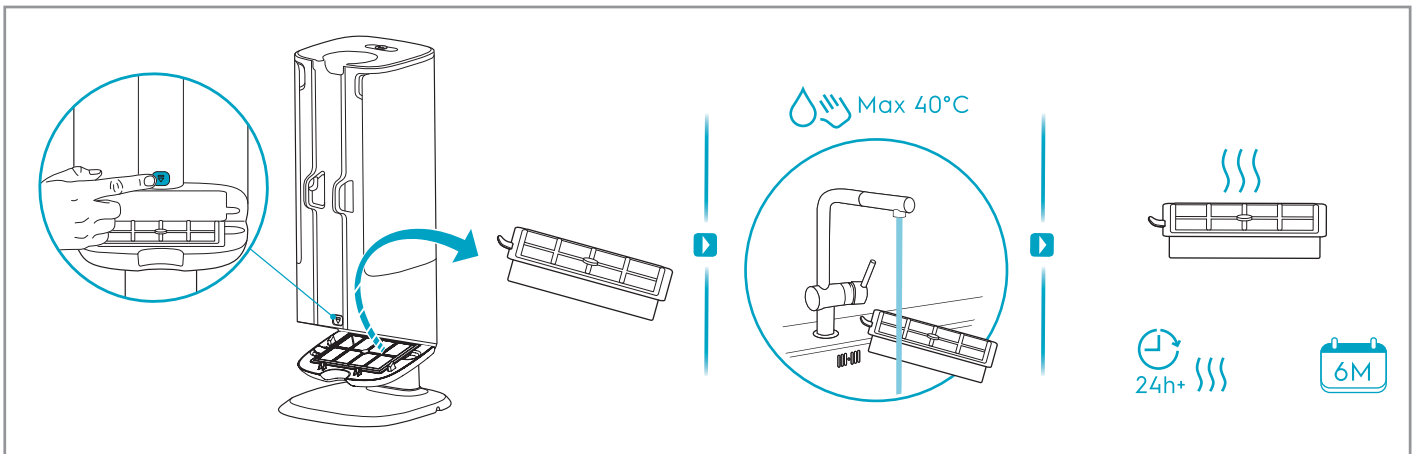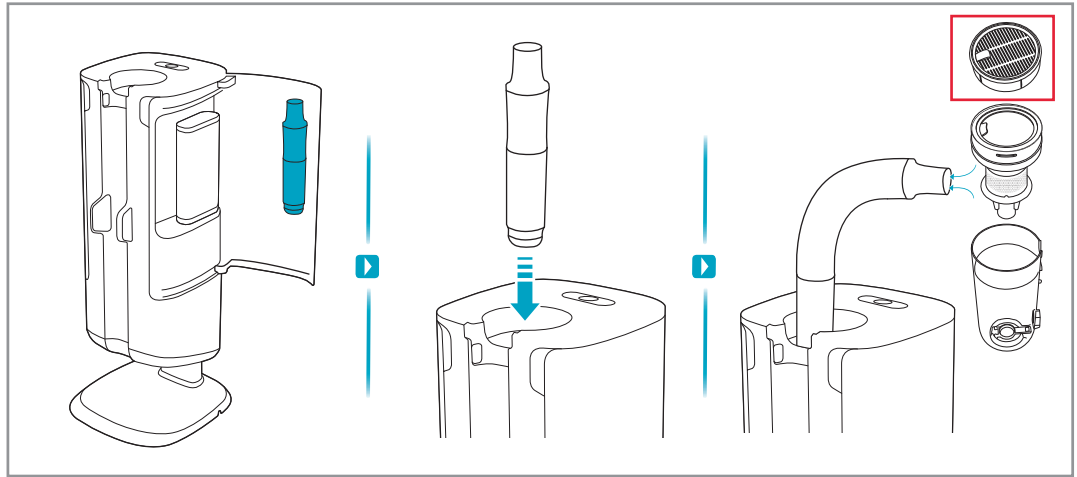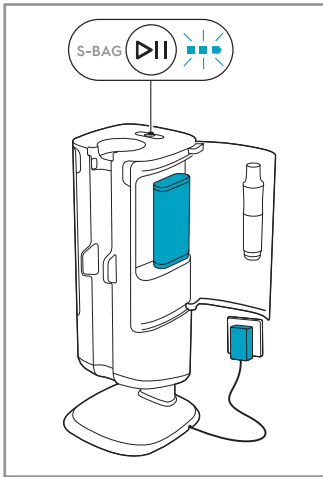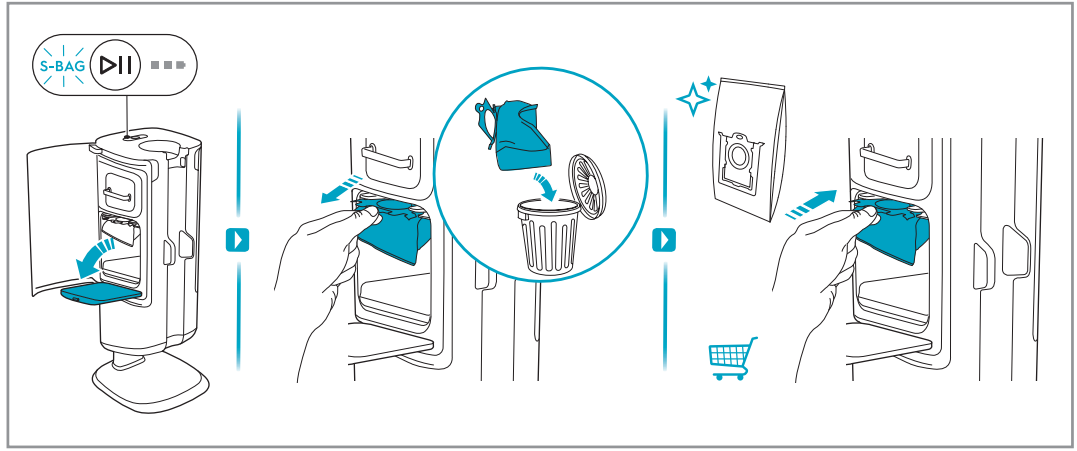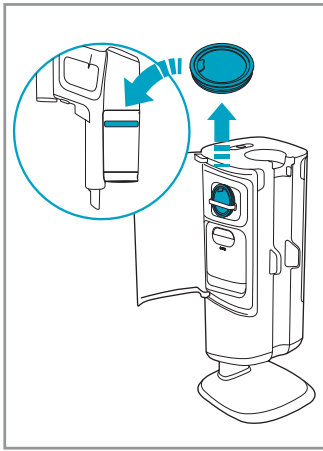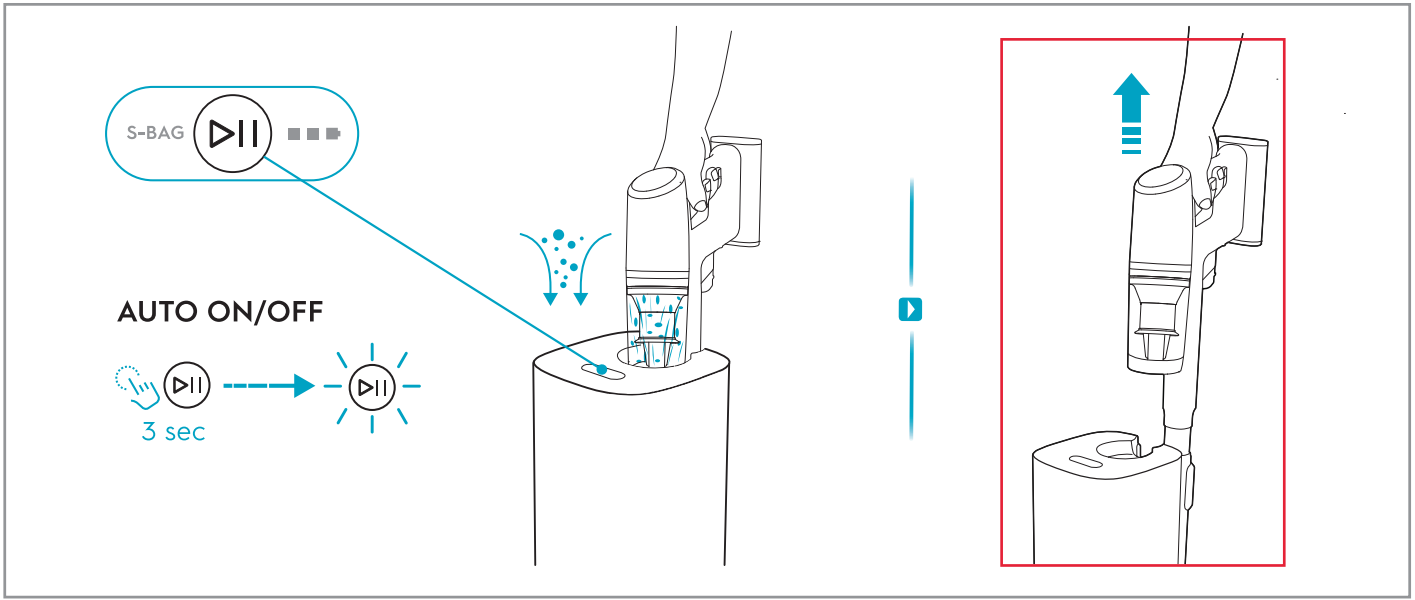


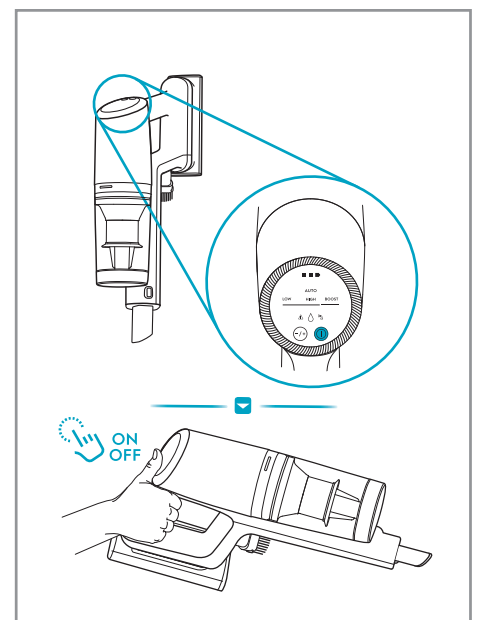
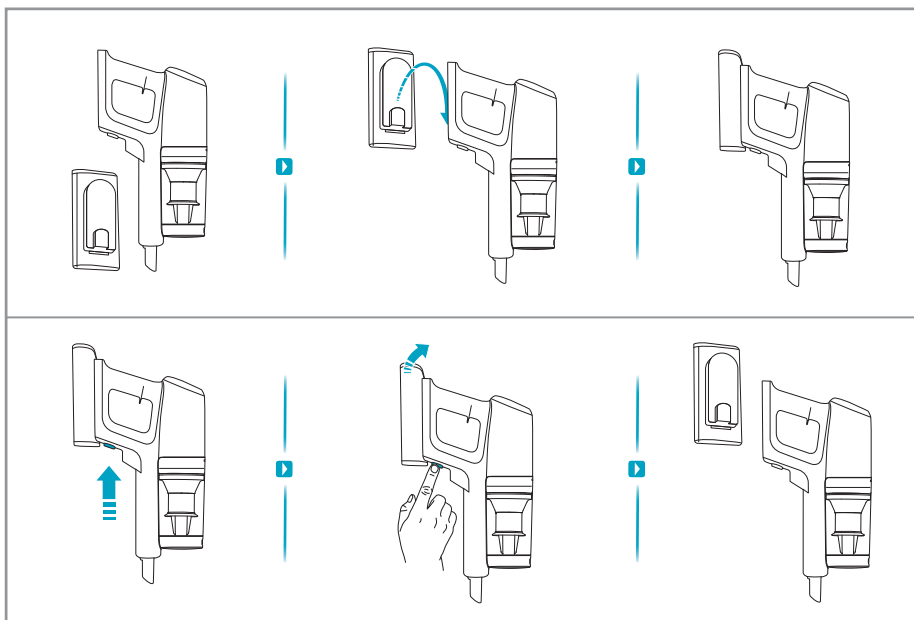
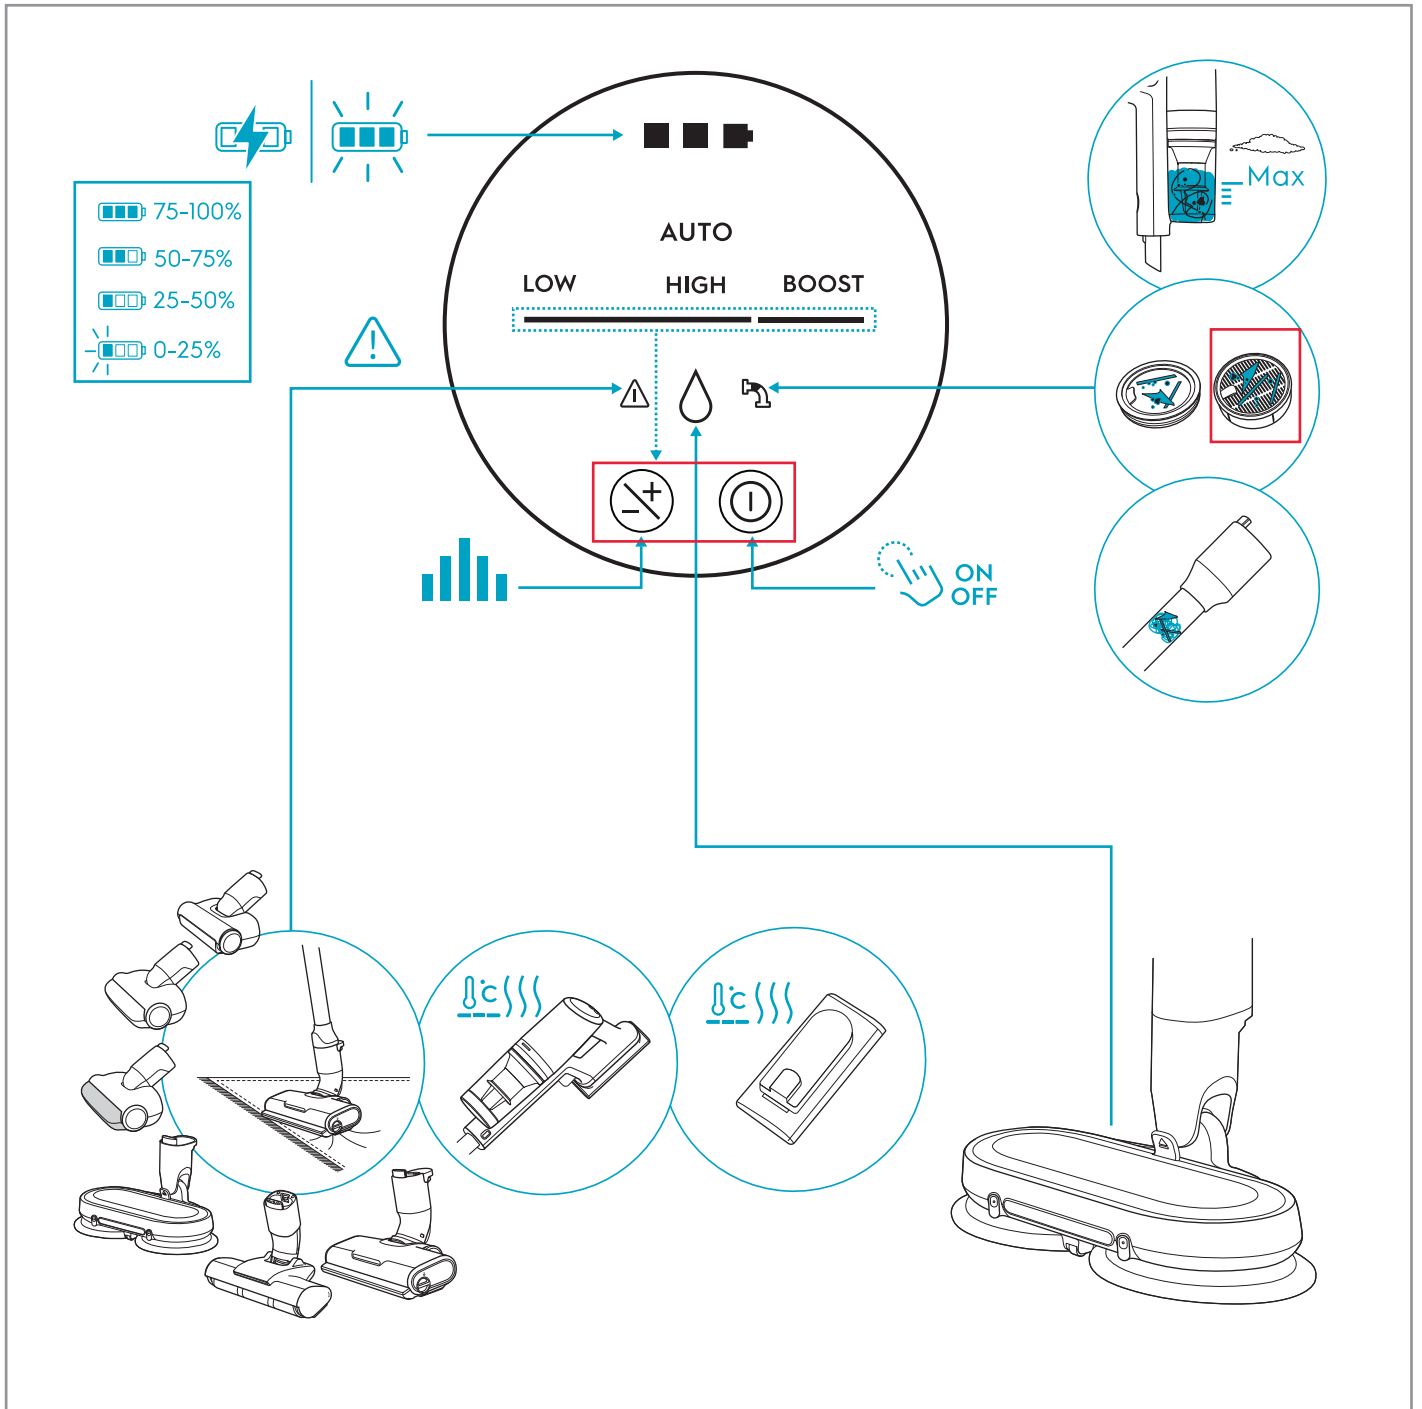


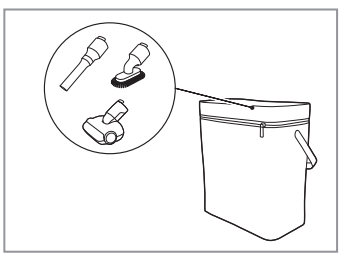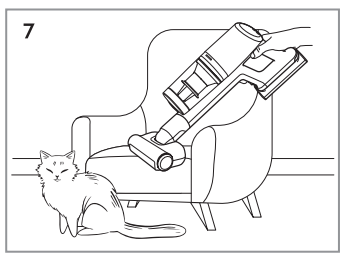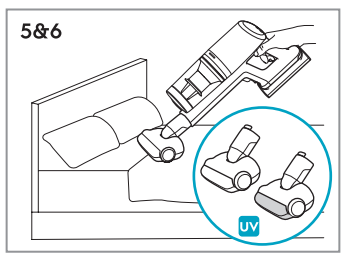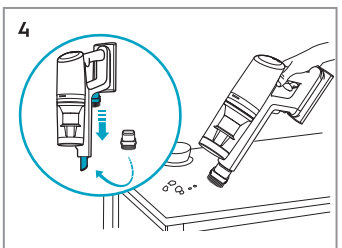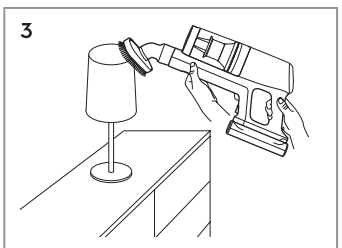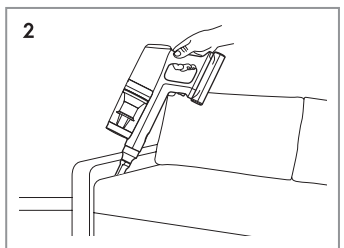
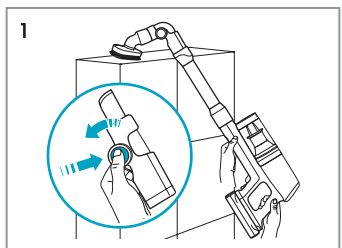
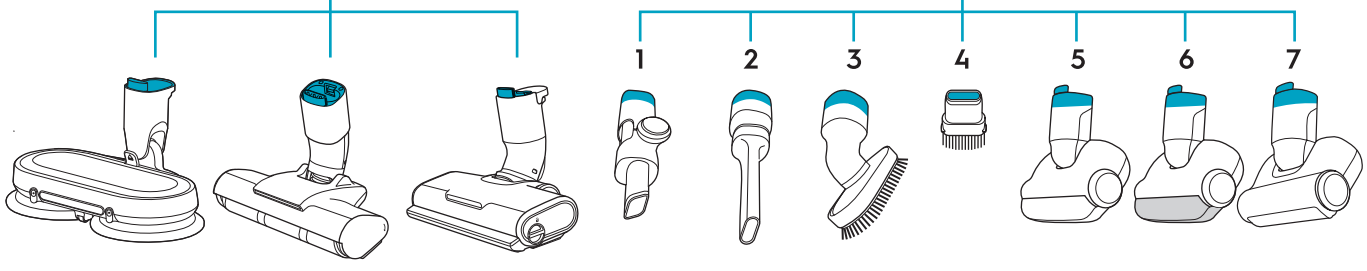
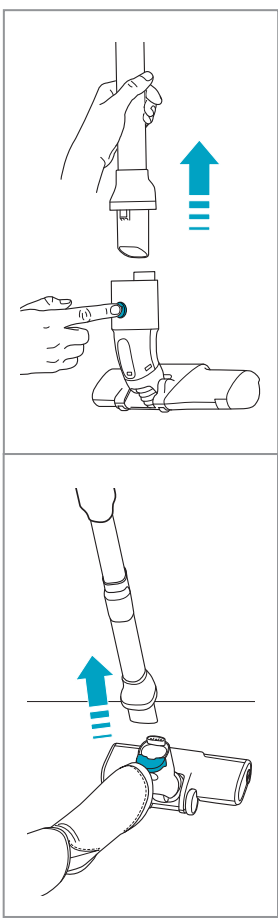
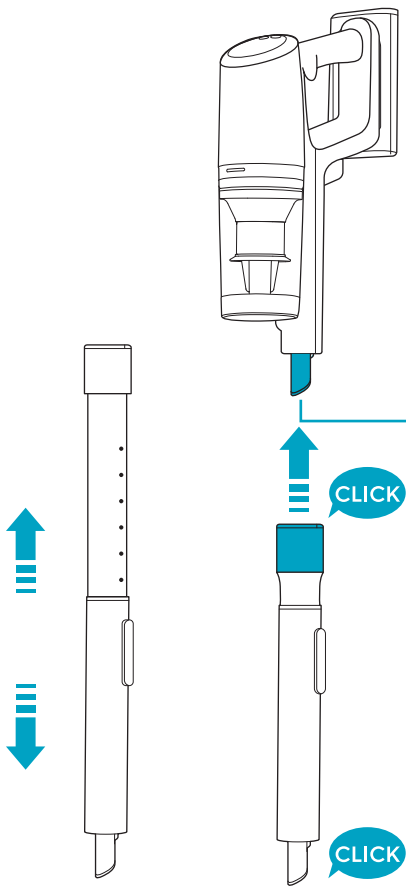







Max 40°C

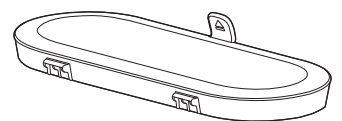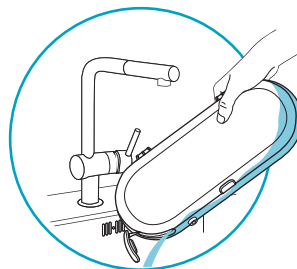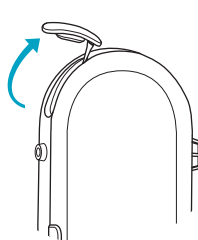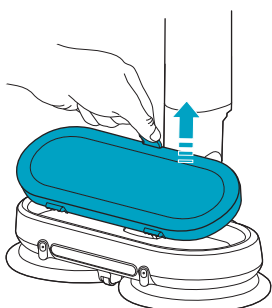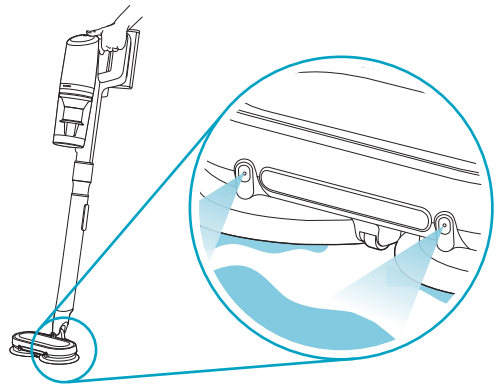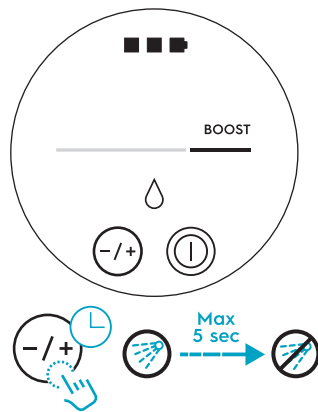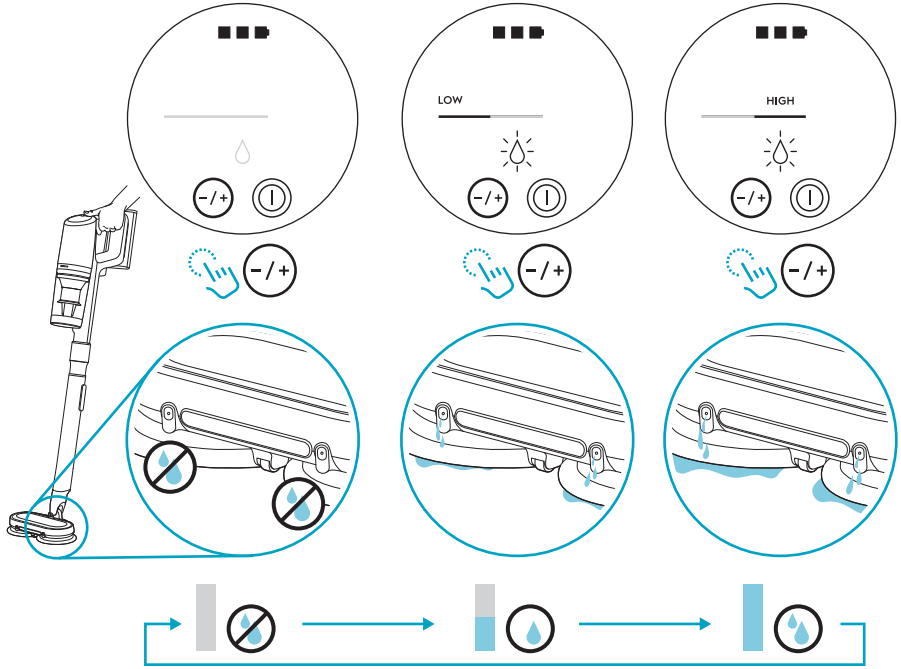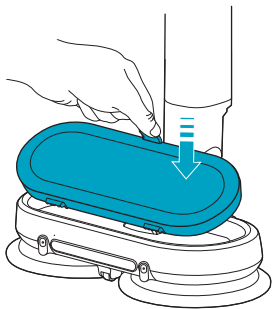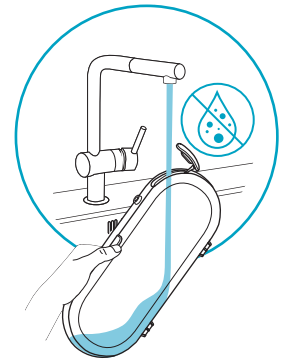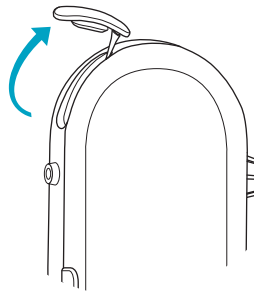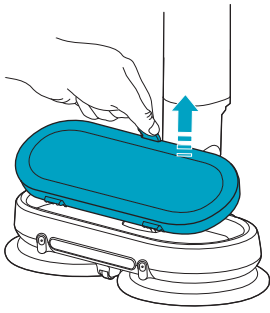           

24h+

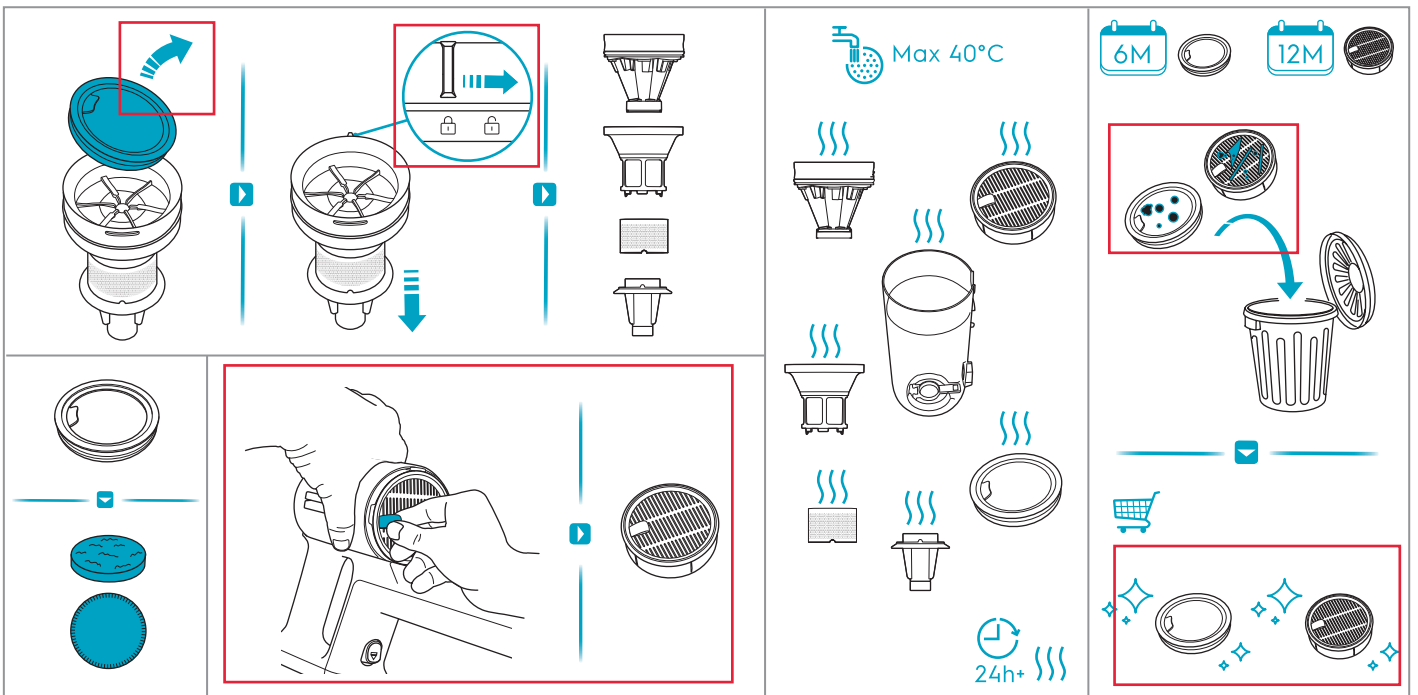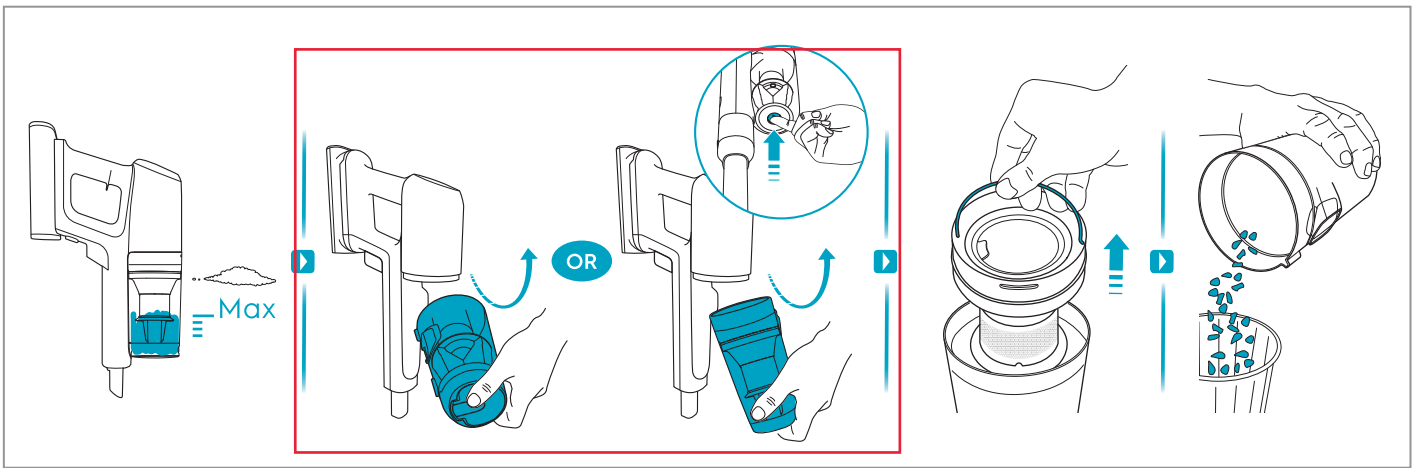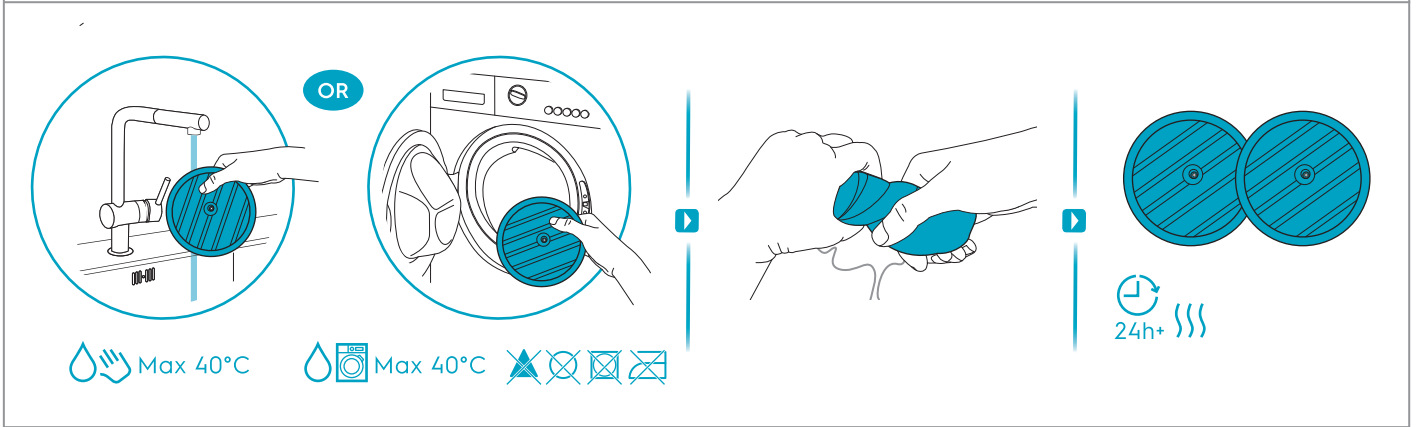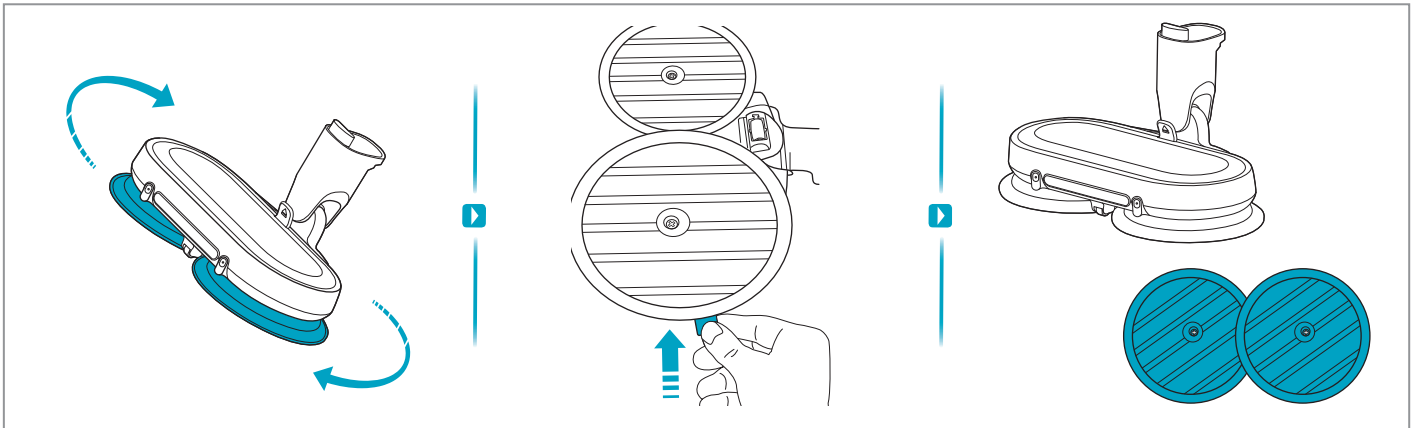    

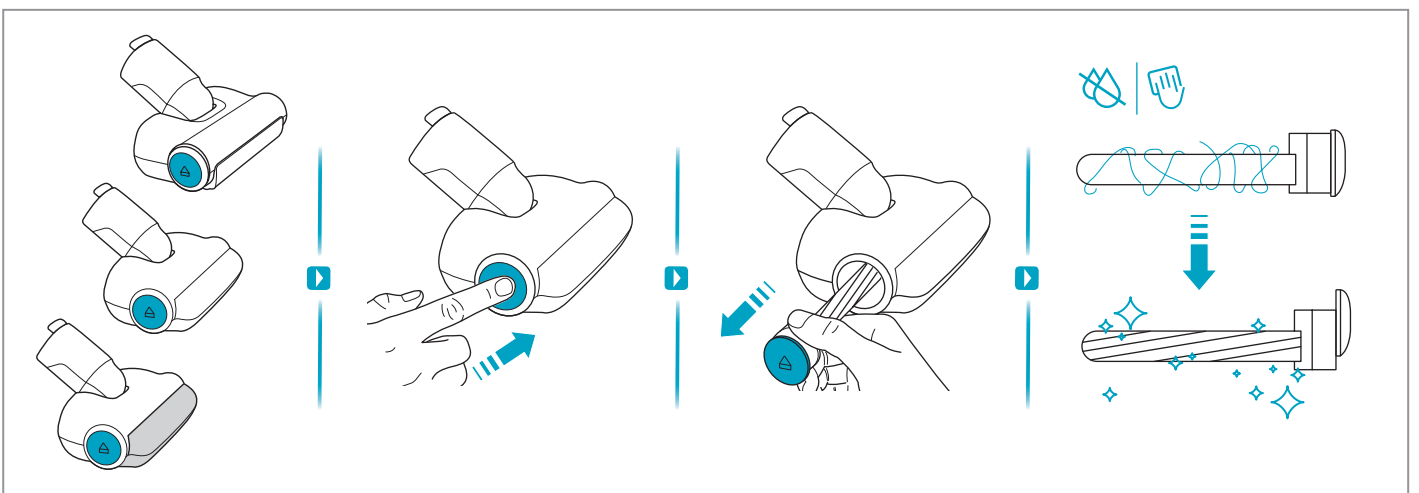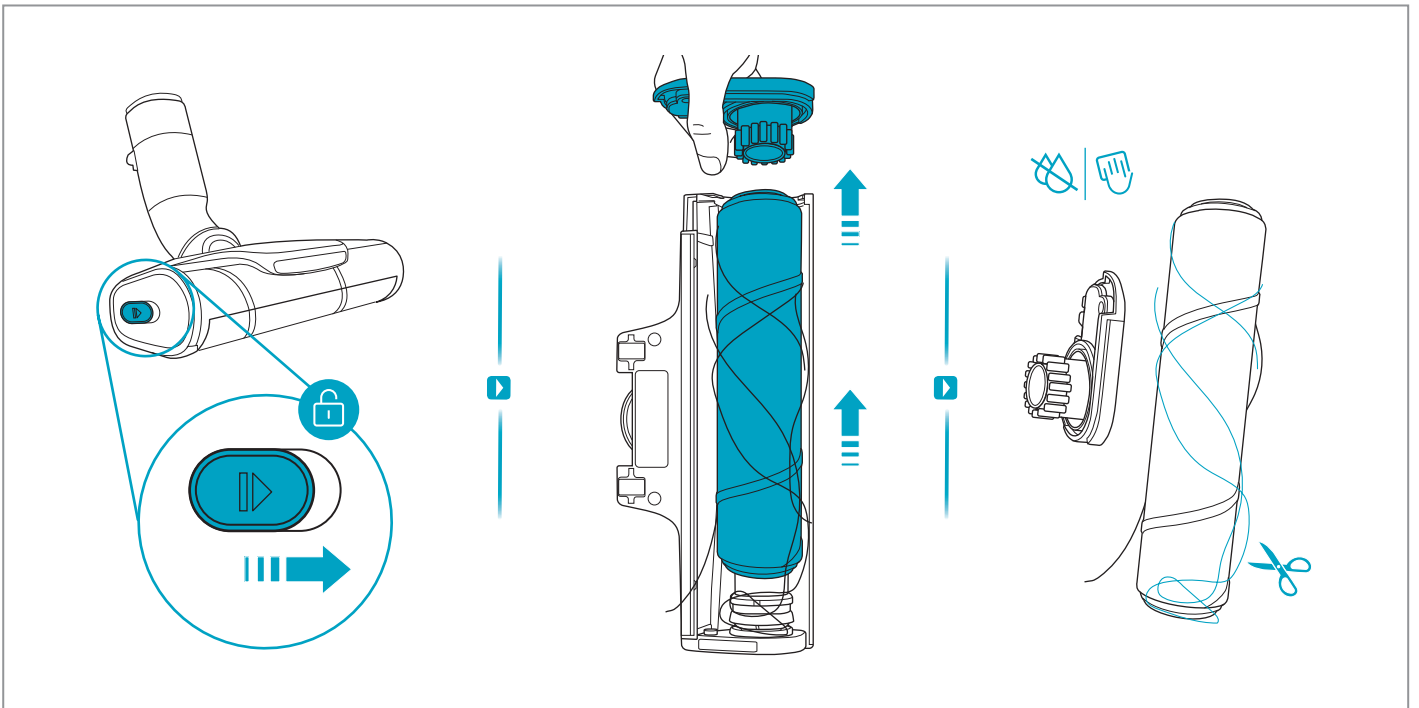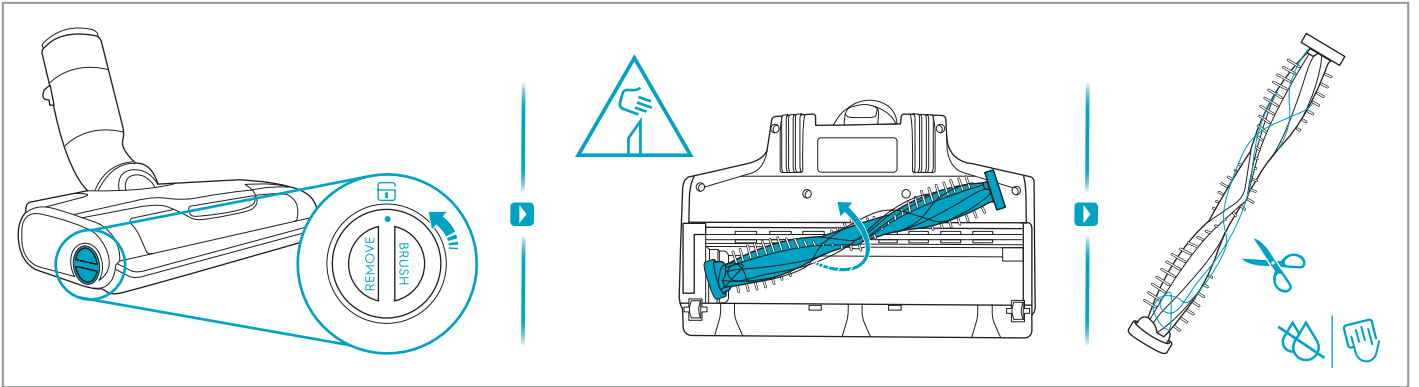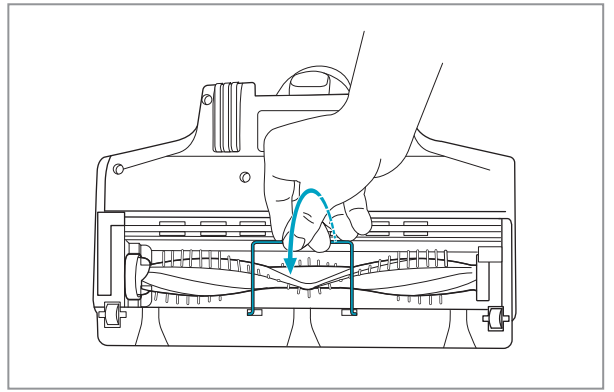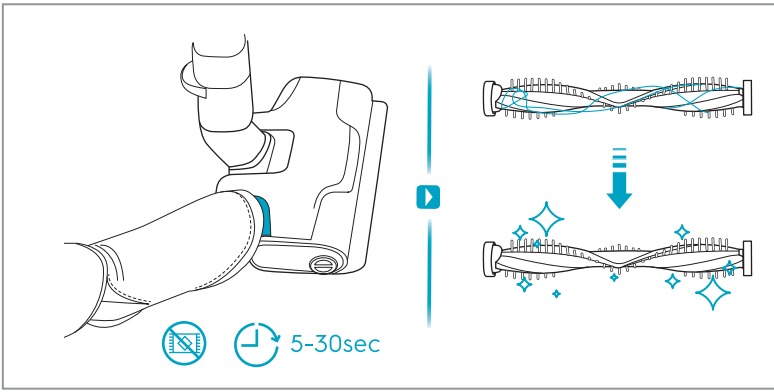     

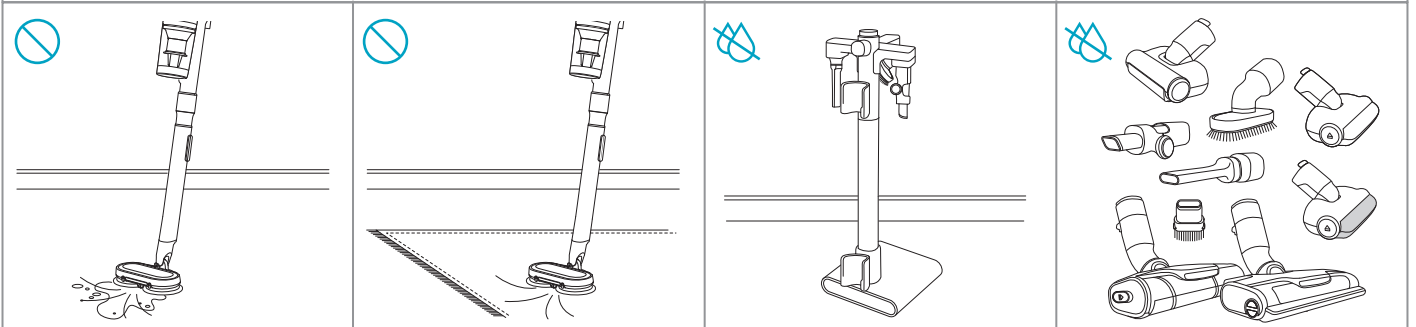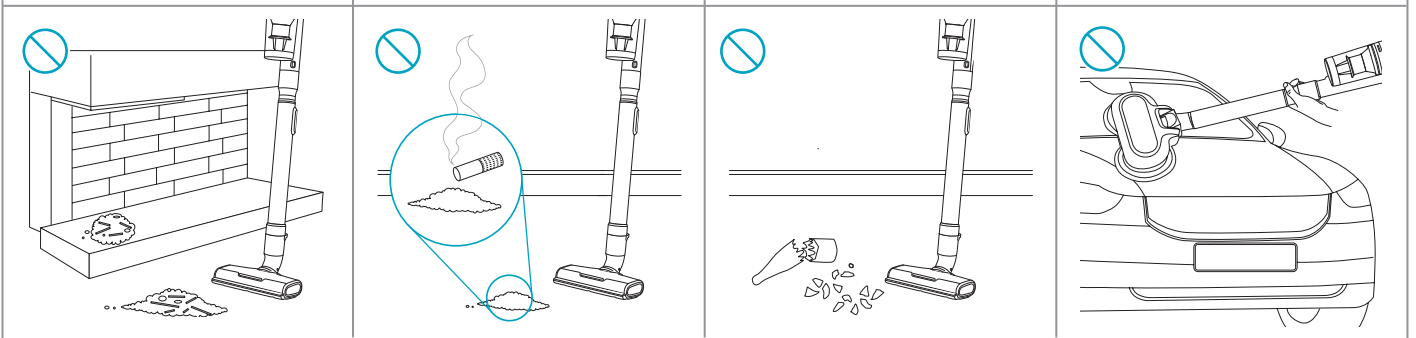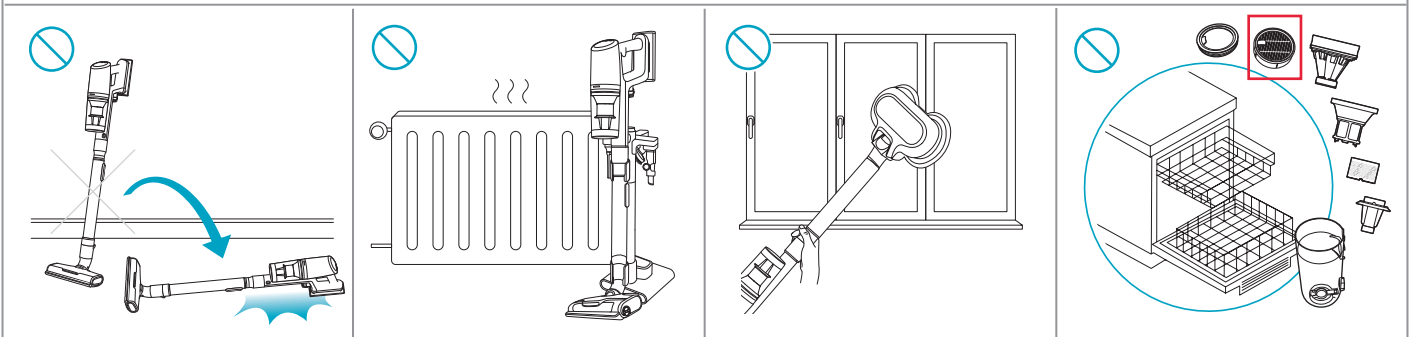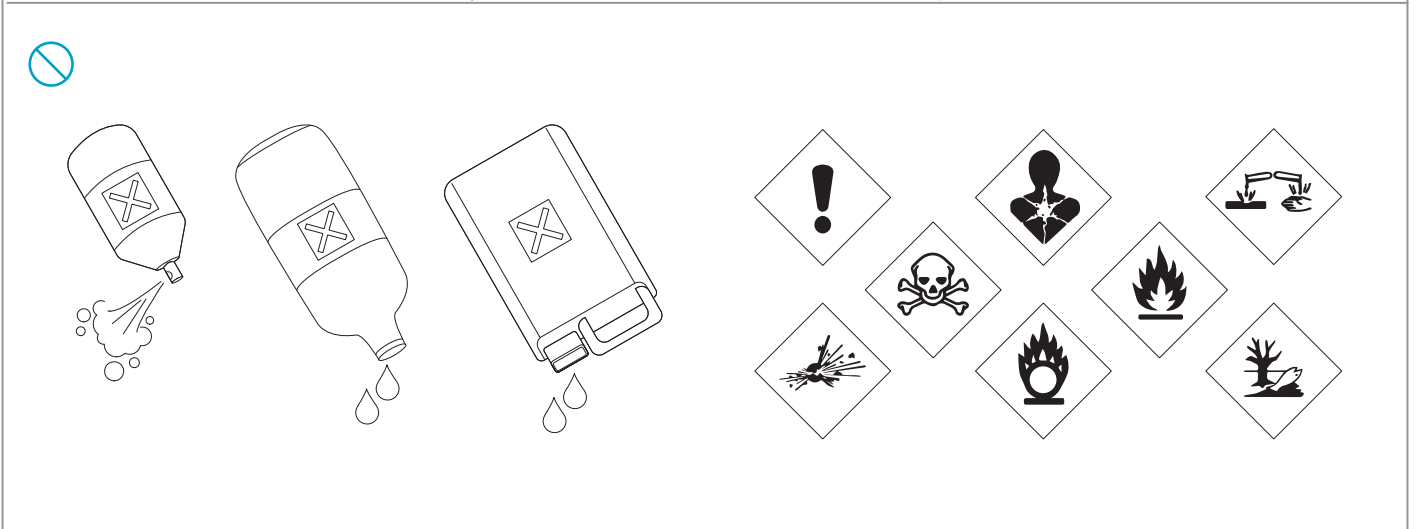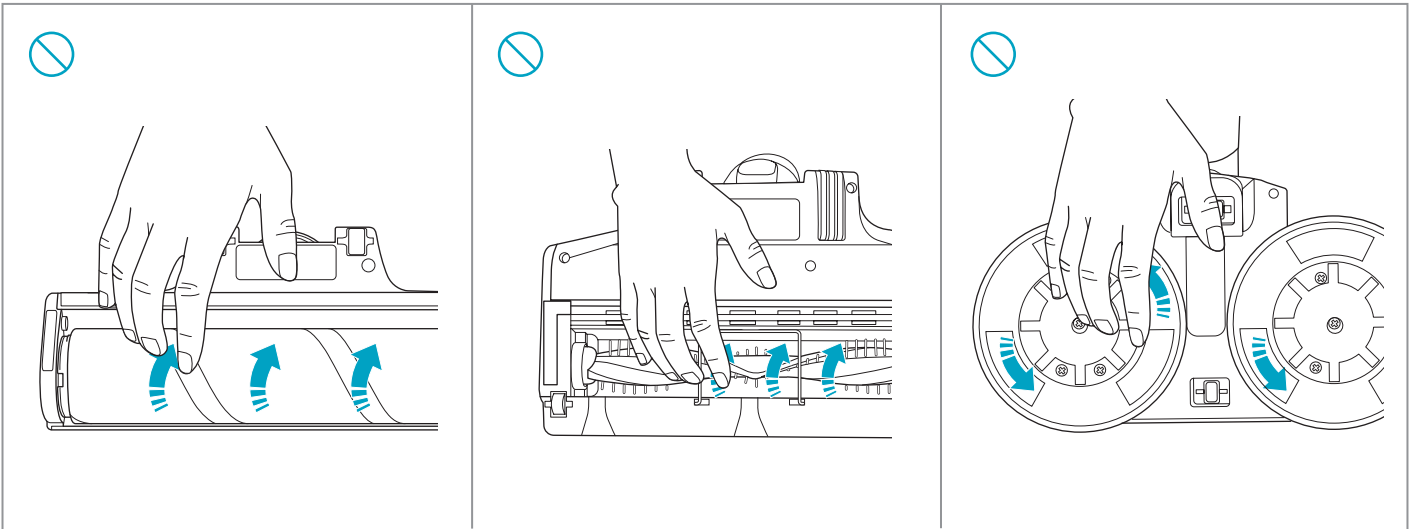     




www.shop.electrolux.com



ESKW6

900 923 742

 
**Yearly
Performance Kit**

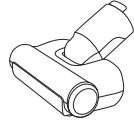

ZE155

900 923 379

 
PetPro+

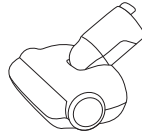

ZE149

900 923 380

 
BedProPower+

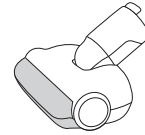

ZE149A

900 923 381

 BedProPowerUV+

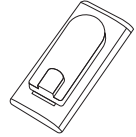

ZE190

900 923 812


**Extra Battery
4.0Ah/100Wh**



EPPCS2

900 923 550

 
**PowerPro
Cleaning Station**

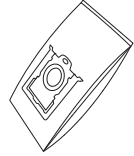

E201S

900 168 458

 
**S-bag for
Emptying Station**

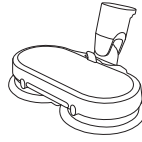

ZE177

900 923 744

 
**PowerPro
Mop+ Nozzle**

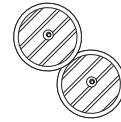

ZE158

900 923 440

 Standard Pads

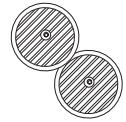

ZE159

900 923 442

Delicate Pads

*Accessories are subject to country availability.

