


USER MANUAL

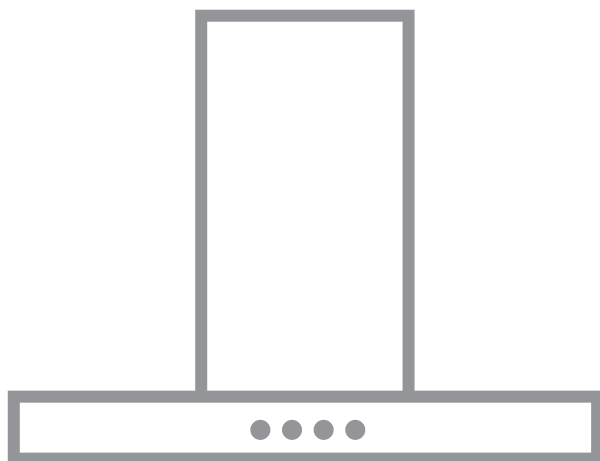

목차

1. 안전 정보 및 설치.....	2
2. 제품 설명.....	3
3. 일상적 사용.....	3
4. 관리 및 세척.....	5
5. 품질보증서.....	6
6. 환경 고려사항.....	8

완벽을 향하여

AEG 제품을 선택해 주셔서 감사합니다. 당사는 일상생활을 편리하게 해주는 혁신적 기술력을 기존 전자 제품에서 찾아볼 수 없었던 수준의 제품으로 구현하여 완벽한 성능의 신제품을 소비자에게 선보여왔습니다. 제품 성능에 대한 정확한 정보가 궁금하시다면 잠시 시간을 내어 본 설명서를 읽어보시기 바랍니다.

당사 웹사이트 이용을 권장합니다.



사용 지침, 브로슈어, 문제 해결 지침, 서비스 및 수리 정보 확인:
www.aeg.com/support



제품을 등록하시면 더 나은 서비스를 받으실 수 있습니다.
www.registeraeg.com



제품용 액세서리, 소모품, 순정 예비 부품을 구입하실 것을 권유합니다.
www.aeg.com/shop

고객 지원 및 서비스

항상 정품 예비 부품을 사용하십시오.

당사 공식 서비스 센터에 문의할 때는 다음 정보를 미리 확인해주시기 바랍니다. 모델, PNC, 일련번호.

해당 정보는 명판에 표기되어 있습니다.

⚠ 경고/주의-안전 정보

ℹ 일반 정보 및 팁

🌿 환경 정보

사전 통지 없이 변경될 수 있습니다.

1. 안전 정보 및 설치




경고

안전 정보 및 설치에 대해서는 별도의 설치 지침 안내 책자를 참조하십시오. 전자 제품을 사용하거나 유지 보수하기 전에 안전 항목을 주의 깊게 읽으십시오.

2. 제품 설명

2.1 제어판 개요

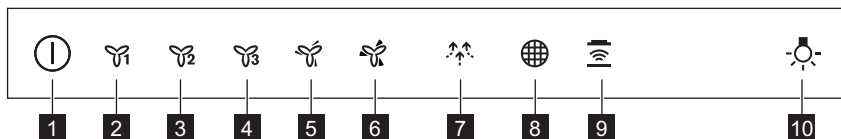

기능	설명
1	켜기/끄기 후드를 켜고 끕니다.
2	첫 번째 속도 모터가 첫 번째 속도 단계로 전환됩니다.
3	두 번째 속도 모터가 두 번째 속도 단계로 전환됩니다.
4	세 번째 속도 모터가 세 번째 속도 단계로 전환됩니다.
5	최대 속도 모터가 최대 속도 단계로 전환됩니다.
6	속도 부스트 모터가 최대 속도 단계로 전환됩니다. 5분 후 제품은 이전 설정으로 돌아갑니다.
7	미동 후드는 최저 속도로 작동합니다. 60분이 지나면 작동이 멈춥니다.
8	필터 알림 활성탄 필터를 교체하거나 청소하고 그리스 필터를 청소하도록 알려줍니다.
9	Hob² Hood 호브에서 후드를 제어하는 기능이 작동함을 알리는 표시등입니다.
10	램프 조명을 켜고 끕니다.

3. 일상적 사용

3.1 후드 사용

아래의 표에 따른 권장 속도를 확인합니다.

	음식을 데우거나 냄비 뚜껑을 덮어 조리 시
	여러 조리 영역이나 버너에서 냄비 뚜껑을 덮어 조리하거나 살짝 튀길 때
	많은 양의 음식을 뚜껑을 덮지 않고 끓이거나 튀길 때, 여러 조리 영역이나 버너에서 조리할 때
그리고	많은 양의 음식을 뚜껑을 덮지 않고 끓이거나 튀길 때, 습기가 많을 때.



매우 낮은 소음 수준으로 요리 후 주방의 공기를 바꾸어 줍니다. 심볼을 터치하여 활성화 및 비활성화할 수 있습니다. 기능은 60분 후에 자동으로 꺼집니다. 조리 후에만 사용할십시오.



조리 후 약 15분간 후드를 계속 작동할 것을 권장합니다.



제어판은 센서 필터입니다. 이러한 기능을 활성화하려면, 기호를 1초 동안 터치합니다.

후드 작동법:

1. ① 기호를 눌러 전자 제품 전원을 켭니다. 이제 기능을 활성화할 수 있습니다.
2. 기능을 작동하려면 기호를 터치합니다.



후드 라이트는 후드의 다른 기능과는 별개로 작동합니다. 조리 표면을 비추려면 조명 스위치 사용
 조명 강도를 변경하려면 심볼을 다시 길게 누르십시오.

전자 제품 전원을 끄려면 ① 기호를 다시 누릅니다

3.2 Hob² Hood 기능

호브를 후드로 연결하는 자동 기능입니다. 호브와 후드에는 적외선 신호 전달기가 있습니다. 팬의 속도는 모드 설정 및 선반 위의 가장 뜨거운 조리 용기의 온도를 기반으로 자동으로 설정됩니다. 호브를 사용해 팬을 수동으로 작동할 수도 있습니다. 이 기능은 호브의 패널에서 활성화할 수 있습니다.



이 기능의 사용에 자세한 정보는 호브 사용자 설명서를 참조하십시오.

3.3 최대 모터 속도 활성화

를 터치하면, 최대 모터 속도가 8분 동안 작동하기 시작합니다. 그 후 전자 제품은 이전 속도 설정으로 돌아갑니다.



이 기능이 켜지면, 를 추가로 터치해도 아무 영향이 없습니다.

3.4 필터 알림

필터 알람은 활성탄 필터를 교체하거나 청소하고 그리스 필터를 청소하도록 알려줍니다. 그리스 필터의 청소가 필요한 경우 필터 표시등 이 30초 동안으로 켜집니다. 활성탄 필터의 교체나 청소가 필요한 경우 필터 표시등 이 30초 동안으로 깜빡입니다.



관리 및 청소 장의 그리스 필터 청소를 참조하십시오.



관리 및 청소 장의 활성탄 필터 청소 또는 활성탄 필터 교체를 참조하십시오.

기능을 재설정하려면 을 3초 동안 누르십시오.

기능을 활성화 하거나 비활성화하기.

1. 제어판을 켜십시오.
2. 아이콘이 흰색으로 바뀌었는지 확인하십시오.
3. 이 기능을 작동하려면, 을 3초 동안 누르십시오.

기능이 활성화 되면 필터 아이콘 이 다섯 번 깜빡입니다.

4. 이 기능을 작동 해제하려면, 을 3초 동안 누르십시오.

기능이 비활성화되면 필터 아이콘이 4초간 켜집니다.

4. 관리 및 세척

4.1 세척 시 주의 사항



세척제

연마성 세제와 브러쉬를 사용하지 마십시오.

미지근한 물에 순한 세척제를 풀어 적신 부드러운 천으로 전자 제품 표면을 청소합니다.

조리 후에는 전자 제품의 일부분이 뜨거워질 수 있습니다. 열룩을 방지하기 위해 전자 제품을 반드시 식힌 다음 깨끗한 천이나 키친 타월로 물기를 제거해야 합니다.

순한 세척제로 열룩을 닦으십시오.



후드를 깨끗이 유지하십시오

전자 제품 및 그리스 필터는 매달 청소하십시오. 내부 및 그리스 필터는 기름기로 부터 조심스럽게 청소하십시오. 기름기 축적 또는 기타 잔여물은 화재를 일으킬 수 있습니다.

필터 알람이 켜지면 부속품 청소를 위해 지침을 따르십시오. 평상시 사용 중 필터 알람 장을 참조하십시오.

그리스 필터는 식기세척기로 세척 가능합니다.

식기세척기는 낮은 온도 및 짧은 주기로 설정되어야 합니다. 그리스 필터가 변색 될 수 있지만, 이는 전자 제품의 성능에는 영향을 미치지 않습니다.



활성탄 필터


활성탄 필터의 포화 시간은 조리 종류 및 그리스 필터 청소 주기에 따라 다릅니다. 활성화된 숯 필터는 세척할 수 없으며, 재생할 수 없으며 작동 후 매 4/6개월마다 교체하여야 하며 특별히 많이 사용한 경우에는 더 빨리 교체해야 합니다.

4.2 그리스 필터 청소


필터는 서로 마주보고 양쪽에 클립과 핀으로 장착되어 있습니다.

필터 청소:

1. 커버를 잡아당겨 여십시오.

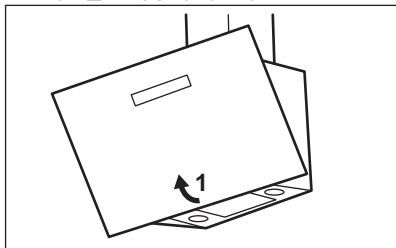

2. 후드 (1) 아래 필터 패널에 있는 장착 클립의 손잡이를 누르십시오.

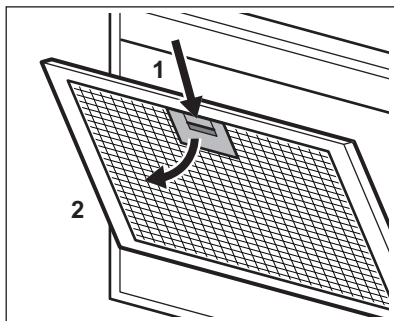

3. 필터의 전면을 아래 쪽으로 살짝 기울이고 (2), 잡아 당기십시오.

모든 필터에 대해 처음 두 단계를 반복합니다.

4. 비연마성 세제를 묻힌 스폰지를 사용하여 필터를 청소하거나 식기세척기를 사용하십시오.



식기세척기는 낮은 온도 및 짧은 주기로 설정되어야 합니다. 그리스 필터가 변색될 수 있지만, 이는 전자 제품의 성능에는 영향을 미치지 않습니다.

5. 필터를 다시 장착하려면 처음 두 단계를 역순으로 수행하십시오.
적용 가능한 경우 모든 필터에 대해 단계를 반복하십시오.


4.3 슛 필터 교체



경고
슛 필터는 세척할 수 없습니다!

필터 교체:

1. 전자 제품에서 그리스 필터를 꺼냅니다. 본 장의 "그리스 필터 청소"를 참조하십시오.
2. 탭을 필터 아래쪽으로 당깁니다. 슛 필터는 두 개가 있습니다. 하나는 제품의 아래쪽에 있고 다른 하나는 앞쪽에 있습니다.

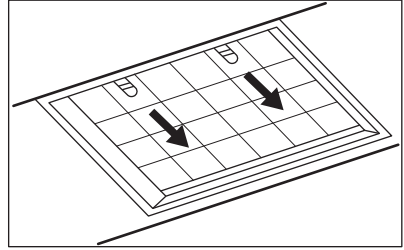

3. 필터 앞쪽을 약간 아래로 기울인 다음 당깁니다.
4. 새 필터를 설치하려면 동일한 단계를 반대 순서로 수행합니다.
어떤 경우든, 적어도 4개월마다 필터를 교체해야 합니다.

5. 품질 보증서

수입판매원:



일렉트로룩스 코리아 (주)

서울특별시 중구 을지로 100 파인에비뉴빌딩 B 동 9 층

1670-9727

www.aeg.co.kr

제품보증서

본 제품의 제품
보증기간은
1 년입니다.

제품보증에 대하여

일렉트로룩스 코리아에서는 품목별 소비자 분쟁해결 기준 공정거래위원회 고시에 따라 아래와 같이 제품에 대한 보증을 실시합니다. 서비스 발생 시 일렉트로룩스 코리아에서 지정한 서비스 업체에서 서비스를 진행합니다. 단, 고객과실 및 천재지변에 의해 고장이 발생한 경우는 보증대상에서 제외되어 유사 처리됨을 알려드립니다.

제품명:	모델명:
고객명:	제조번호:
구입일:	구입처:

무상서비스

소비자 피해 유형	보상내용
	보증기간 이내 보증기간 이후

부품보유기간 내 정상적인 사용 상태에서 발생한 성능, 기능상의 고장 발생 시	구입 후 10 일 이내에 중요한 수리를 요할 때	제품 교환 또는 구입가 환불	해당 없음
	구입 후 1 개월 이내에 중요한 수리를 요할 때	제품 교환 또는 무상 수리	
	제품 구입 시 운송과정 및 제품 설치 중 발생된 피해	제품 교환	
	교환된 제품이 1 개월 이내에 중요한 수리를 요하는 고장 발생 교환 불가능 시	구입가 환급	
	수리 가능	동일 하자로 2 회까지 고장 발생 시	무상 수리
		동일 하자로 3 회째 고장 발생 시	유상 수리
		서로 다른 하자로 5 회째 고장 발생 시	유상 수리
	소비자가 수리 의뢰한 제품을 사업자가 분실한 경우		정액 감가상각한 금액에 10% 를 가산하여 환급
	부품보유기간 이내 수리용 부품을 보유하고 있지 않아 수리가 불가능한 경우		
소비자의 고의 과실로 인한 고장인 경우	수리용 부품은 있으나 수리 불가능 시		정액 감가상각 후 환급
	수리가 불가능한 경우	유상 수리에 해당하는 금액 징수 후 제품 교환	유상 수리 금액 징수 후 감가상각 적용 제품 교환
	수리가 가능한 경우	유상 수리	유상 수리

유상서비스

서비스 신청 시 다음과 같은 경우는 무상 서비스 기간 이내라도 요금이 청구됩니다.

1. 사용 설명, 간단 조정, 제품 세척 등 제품의 고장이 아닌 경우

- 사용설명서에 기재된 사용법에 대한 문의 또는 간단한 조작 시
- 제품 필터류 및 소모성 부품의 교체 또는 액세서리 (브러쉬, 파워브러쉬 등) 의 이물 제거 및 세척 시
- 배송된 제품 초기 설치 시 (구입 후 서비스를 요청하여 설치 시에는 요금이 부과됨)
- 제품의 이동, 이사 등으로 인한 설치 부실 시
- 인터넷, 안테나, 유 / 무선 신호 등 외부환경 문제 시
- 타사 제품 (소프트웨어 포함) 으로 인한 고장 및 서비스를 잘못 신청한 경우

2. 소비자의 과실로 인해 제품이 고장 난 경우

- 제품을 떨어뜨리거나 외부 충격으로 인하여 제품의 파손 및 기능상의 고장 발생 시
- 고객이 부주의 또는 시너, 벤젠 등과 같은 유기 용제에 의한 제품 외관의 손상 및 변형 시
- 일렉트로룩스코리아에서 지정하지 않은 소모품 및 액세서리 사용으로 고장 발생 시
- 일렉트로룩스코리아에서 위탁하지 않은 서비스 업체 및 사람이 수리 또는 개조하여 고장 발생 시
- 사용설명서에 기재된 안전에 관련된 주의사항 및 수칙을 지키지않아 고장 발생 시
- 정상적인 전기 용량을 사용하지 않아 고장 발생 시
- 전원 차단기 작동 또는 전원 콘센트 자체 결함 등과 같이 제품의 하자가 아닌 외부 원인으로 인한 경우

3. 그 밖의 경우

- 소모성 부품의 수명이 다하여 고장 발생 시 (배터리, 필터류 등)
- 천재지변 (낙뢰, 화재, 염해, 수해 등) 에 의한 고장 발생 시



일렉트로룩스 코리아 주식회사

아에게 고객센터	인터넷 홈페이지
일렉트로룩스 코리아 고객센터 1670-9727 제품 모델명, 고장 상태, 연락처를 정확히 알고 계시면 항상 친절하고 신속한 서비스를 제공받을 수 있습니다.	www.aeg.co.kr 제품 정보 및 사용설명서 제공 1:1 전문 상담 제공 서비스 관련 문의 서비스센터 위치 검색

6. 환경 고려사항

기호 ♻️가 표시된 재료는 재활용하십시오. 포장재는 해당 용기에 넣어 재활용하십시오. 전기 제품 및 전자 제품 폐기물을 재활용하여 환경과 인류 건강을 보호하십시오. 가정용 폐기

물 기호 ♻️가 표시된 제품을 폐기하지 마십시오. 가까운 재활용 시설에 제품을 보내거나 가까운 시청에 문의하십시오.

CONTENTS

1. SAFETY INFORMATION AND INSTALLATION.....	9
2. PRODUCT DESCRIPTION.....	10
3. DAILY USE.....	10
4. CARE AND CLEANING.....	12
5. ENVIRONMENTAL CONCERNS.....	13

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

Visit our website to:



Get usage advice, brochures, trouble shooter, service and repair information:
www.aeg.com/support



Register your product for better service:
www.registeraeg.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 **Warning / Caution-Safety information**

 **General information and tips**

 **Environmental information**

Subject to change without notice.

1. SAFETY INFORMATION AND INSTALLATION




WARNING!

Refer to the separate Installation Instructions booklet for Safety Information and Installation. Read carefully the Safety chapters before any use or maintenance of the appliance.

2. PRODUCT DESCRIPTION

2.1 Control panel overview

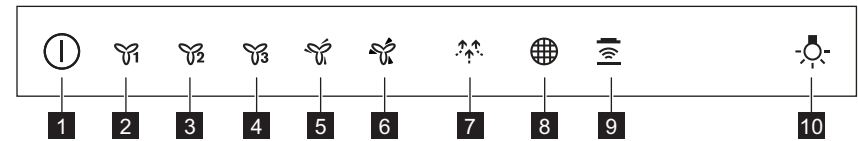

	Function	Description
1	On / Off	Turns the hood on and off.
2	First speed	The motor switches to first speed level.
3	Second speed	The motor switches to second speed level.
4	Third speed	The motor switches to third speed level.
5	Maximum speed	The motor switches to maximum speed level.
6	Speed boost	The motor switches to maximum speed level. After 5 minutes the appliance returns to previous setting.
7	Breeze	The hood operates on the lowest speed. After 60 minutes the appliance turns off.
8	Filter notification	Reminds to change or clean the charcoal filter and clean the grease filter.
9	Hob²Hood	Indicator of the function to control hood from hob.
10	Lamp	Turns the lights on and off.

3. DAILY USE

3.1 Using the hood

Check the recommended speed according to the table below.

	While heating up food, cooking with covered pots.
	While cooking with covered pots on multiple cooking zones or burners, gentle frying.
	While boiling and frying big quantities of food without a lid, cooking on multiple cooking zones or burners.
	While boiling and frying big quantities of food without a lid, big humidity.



Refreshes the air in kitchen after cooking at a very low noise level. It can be activated and de-activated by touching the symbol. The function turns off automatically after 60 minutes. Use after cooking only.



It is recommended to leave the hood operating for approximately 15 minutes after cooking.



The control Panel is a sensor field. Touch the symbols for 1 second to activate the functions.

To operate the hood:

1. Turn on the appliance by pressing the  symbol. You can now activate the functions.
2. To activate the function touch the symbol.



The hoods light works independently to other hood functions. To illuminate the cooking surface touch . To change the light intensity touch and hold the symbol again.

To turn off the appliance press the  symbol again.

3.2 Hob²Hood function

It is an automatic function which connects the hob with a hood. Both the hob and the hood have an infrared signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan using the hob manually. The function can be activated from panel of the hob.



For more information how to use the function refer to the hob user manual.

3.3 Activating Maximum Motor Speed

When you touch , the Maximum Motor Speed starts to operate for 8 minutes. After that time, the appliance returns to its previous speed settings.



When the function is turned on, additional touch on  does not have any effects.

3.4 Filter notification

Filter alarm reminds to change or clean the charcoal filter and clean the grease filter. The filter indicator  is turned on for 30 seconds if the grease filter must be cleaned. The filter indicator  flashes for 30 seconds if the charcoal filter must be replaced or cleaned.



Refer to cleaning the grease filter in care and cleaning chapter.



Refer to cleaning the charcoal filter or replacing the charcoal filter in care and cleaning chapter.

To reset the function touch  for 3 seconds.

To activate or deactivate function:

1. Switch on the control panel.
2. Make sure that the icons are turned white.
3. To activate function touch  for 3 seconds.

If the function is activated, the filter icon  flashes five times.

4. To deactivate function touch  for 3 seconds.

If the function is deactivated, the filter icon  turns on for 4 seconds.

4. CARE AND CLEANING

4.1 Notes on cleaning




Cleaning Agents

Do not use abrasive detergents and brushes.

Clean the surface of the appliance with a soft cloth with warm water and a mild detergent.

After cooking some parts of appliance can get hot. To avoid stains appliance must be cooled down and dried with clean cloth or paper towels.

Clean stains with a mild detergent.



Keep the hood clean

Clean the appliance and grease filters each month. Clean the interior and grease filters carefully from fat. Fat accumulation or other residue may cause fire.

Follow the instructions for cleaning the accessories when filter notification is on. Refer to Filter notification in daily use chapter.

Grease filters can be washed in a dishwasher.

The dishwasher must be set to a low temperature and a short cycle.

The grease filter may discolour, it has no influence on the performance of the appliance.



Charcoal filter


The time of saturation of the charcoal filter varies depending on the type of cooking and the regularity of cleaning the grease filter. The activated charcoal filter is not washable, cannot be regenerated and must be replaced approximately every 4/6 months of operation, or more frequently for particularly heavy usage.

4.2 Cleaning the grease filter


Filters are mounted with the use of clips and pins on the opposite side.

To clean the filter:

1. Pull the cover to open it.

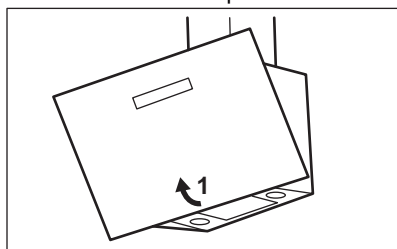

2. Press the handle of the mounting clip on the filter panel underneath the hood (1).

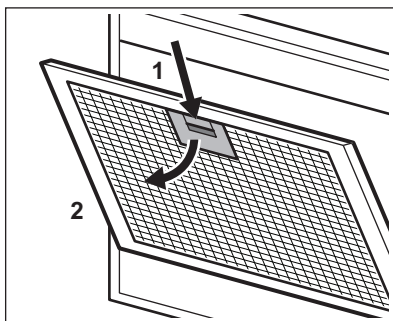

3. Slightly tilt the front of the filter downwards (2), then pull.
4. Clean the filters using a sponge with non abrasive detergents or in a dishwasher.



The dishwasher must be set to a low temperature and a short cycle. The grease filter may discolour, it has no influence on the performance of the appliance.

5. To mount the filters back follow the first two steps in reverse order. Repeat the steps for all filters if applicable.

4.3 Replacing the charcoal filter




WARNING!

The charcoal filter is non-washable!

To replace the filter:

1. Remove the grease filters from the appliance.
Refer to "Cleaning the grease filter" in this chapter.

2. Pull the tabs towards the bottom part of the filter. There are two charcoal filters. One situated underneath and the other at the front side of the appliance.

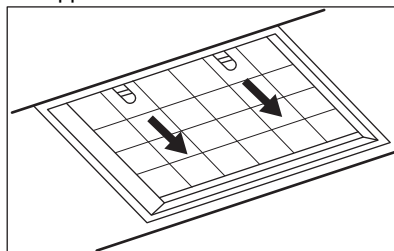

3. Slightly tilt the front of the filter downwards, then pull.
 4. To install a new filter, perform the same steps in reverse order.
- In any case, it is necessary to replace the filters at least every four months.

5. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



867351756-A-122022



AEG